





All outside nuts and screws in stainless steel

Sound pressure levels at 1W/1m Ferit								
SPL vs Freq								
10					_ ^	Λ		
05					$/\!\!\!/\!\!\!/$		1	
00				$ \wedge$	V	V	7/	
95				$\wedge$ $/$			V	
90				$\mathcal{W}_{-}$			₩ #	
85							- WI	
80			+++/				- V	
75			-+/					
70								W^\
65								Imc
60 20 Hz	50	100	200	500	1K	2K	5K	LMS

Specifications					
Material / Color	ASA / RAL 7035				
Mounting	Bracket				
Termination	Screw terminal				
Weight w/transformer	1,4 kg				
IP-rating	66 / 67				
Max. / min. amb. temp	90°C / -50°C				
Rated power	15W				
SPL 1W/1m	108 dB				
SPL rated power	118 dB				
Effective freq. range	330 – 8000 Hz				
Dispersion (-6dB) 1kHz / 4kHz	130° / 33°				
Directivity factor,Q 1kHz/4kHz	3,2 / 11				
Options	Impedances, colors, labels				

## **Installation, Operation and Maintenance Procedures**

- Fasten loudspeaker to wall/ceiling with two screws through foot bracket.
- Remove lid by one screw, lead cable trough cable gland, select required tapping and connect to terminal 70V or 100V.
- Fasten lid with a torque of 1,5 Nm.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required. Available with stainless steel bracket.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.